

**INSTALLATION
INSTRUCTIONS**

P/C 510154-4000


Fixture Type

Wall/Slot 85N


Fixture Assembly

Do not modify or alter this product in any way, or install in any fashion which is contrary to the instructions contained herein. If you have any questions regarding this product or the installation of it, please call Litecontrol Engineering at 781-294-0100.

Cross Section

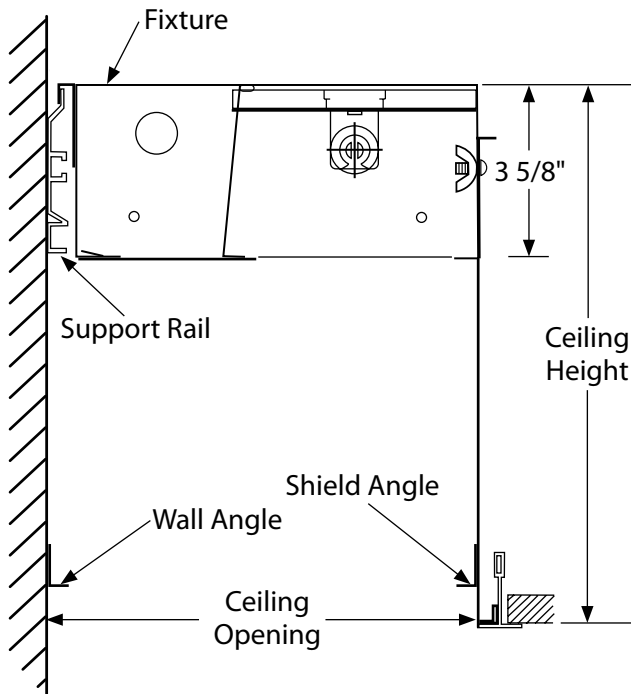

① Ballast Cover Removal

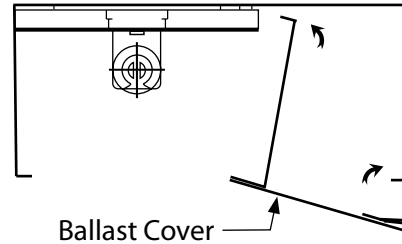


NOTE: Support Rails (shipped separately) must be installed prior to fixture installation per support rail installation sheet.

Instructions:

- 1.a.** Snap ballast cover(s) out of housing and remove hardware polybag.
- b.** Where required, remove (1) 7/8" K.O. in housing top for feed wires shown in "top view" below.

Top View Fixture

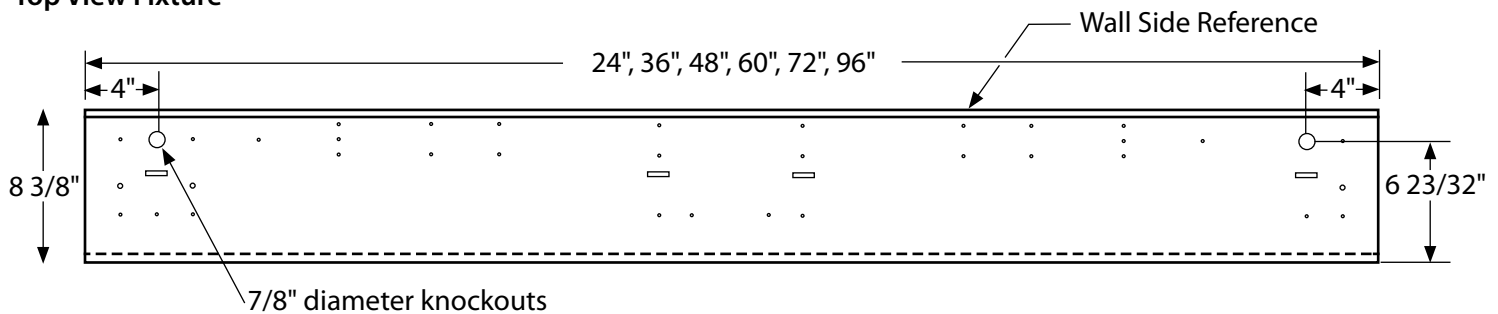


**INSTALLATION
INSTRUCTIONS**

P/C 510154-4000

Fixture Type

Wall/Slot 85N**Fixture Assembly**

Do not modify or alter this product in any way, or install in any fashion which is contrary to the instructions contained herein.
If you have any questions regarding this product or the installation of it, please call Litecontrol Engineering at 781-294-0100.

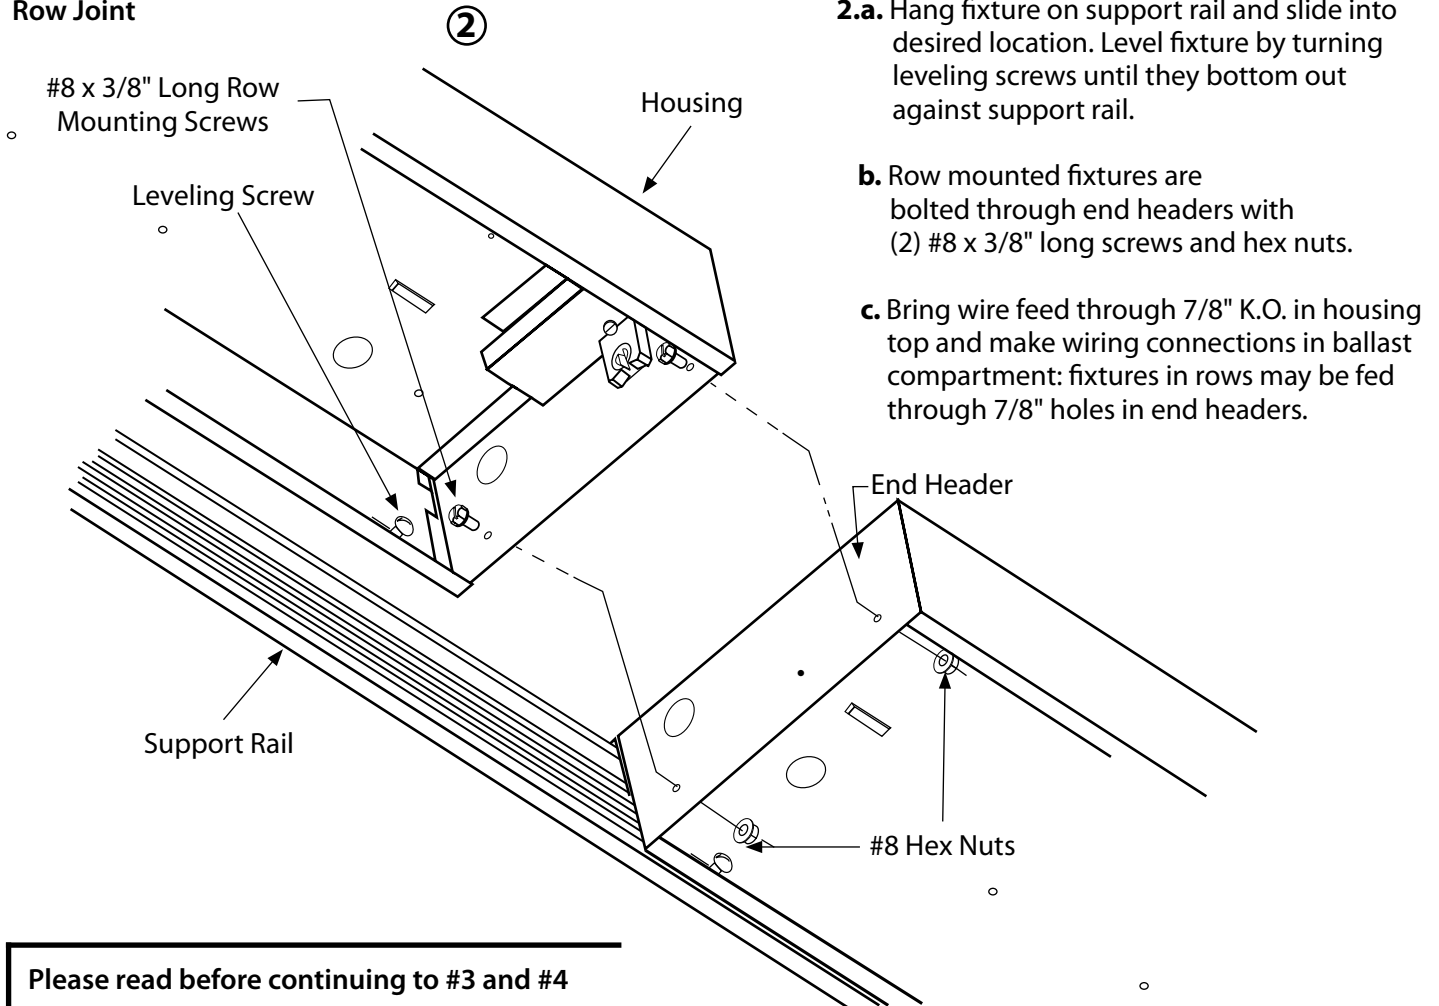Row Joint

2.a. Hang fixture on support rail and slide into desired location. Level fixture by turning leveling screws until they bottom out against support rail.

b. Row mounted fixtures are bolted through end headers with (2) #8 x 3/8" long screws and hex nuts.

c. Bring wire feed through 7/8" K.O. in housing top and make wiring connections in ballast compartment: fixtures in rows may be fed through 7/8" holes in end headers.

Please read before continuing to #3 and #4

- Wall angles (shipped separately) used for "R" or "F" position diffusers are installed at this time.
- Shields (shipped separately) are installed at this time. Refer to shields installation sheet.

NOTE: Last shield in row should be left off fixtures abutting straight extensions, corners or end caps until these kits are installed.

- Straight extensions and corner kits (shipped separately) are installed at this time. Refer to extension kit and corner kits installation sheet.
- End cap option (shipped separately) is installed at this time. Refer to end cap installation sheet.
- Parabolic reflector option "PR" (shipped separately) is installed at this time. Refer to PR reflector option installation sheet.

3. Replace ballast cover(s) and install lamps (by others).

4. Clean exposed surfaces of fixtures and shields with window cleaner.

Diffuser Installation:

Diffusers (shipped separately) are installed at the end of job. Refer to diffusers installation sheet.