

**INSTALLATION  
INSTRUCTIONS**

**END CAPS  
LGD-4400  
LGD-4500**

P/C **510462-0000**

DATE: 1-7-05

PG. 1 OF 1

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

GENERAL NOTES: Installation is similar for both LGD-4400 and LGD-4500 fixtures.

- A) THIS INSTRUCTION SHEET IS USED WITH THE APPLICABLE FIXTURE INSTRUCTION SHEETS.
- B) END CAPS ARE USED AT EACH END OF AN INDIVIDUAL (IND) FIXTURE AND AT ONE END OF AN END OF ROW (EOR) FIXTURE.

**INSTRUCTIONS:**

Align an Inside Adaptor Plate with End Header holes and holes in End Cap.  
Secure with (2) 1/4-20 x 3/8" long machine screws and hex nuts shipped with end caps.

