

**INSTALLATION
INSTRUCTIONS**

PART NO. 510389-0000

FIXTURE TYPE _____

FIXTURE
W-AI-9600

Pg. 1
OF 2



DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

NOTES:


- A) This fixture comes in different lamping versions but the installation is the same for all.
- B) Wall Mounting Brackets and End Caps are shipped separately.

INSTRUCTIONS: (READ ALL INSTRUCTIONS BEFORE STARTING)

1. Mount Wall Brackets to surface at the locations shown on this page and using instruction sheet no. 510342 shipped with brackets. Two Brackets are required for 3', 4', 6' & 8' fixtures and one long bracket is required for 2' fixtures. (See back views).
2. Remove LCD and Ballast cover from fixture by loosening screws; See View A on page 2.
3. Loosening the Socket plate mounting screws and sliding Socket Plates to one side will allow more area for attaching End Caps and fixtures together at a row joint.
4. Mounting: (Refer to View B on page 2)
 - A) Individual Fixtures: remove a 2" knockout in back of housing at feed location. Attach End Caps to both ends of fixture with 8-32 hex nuts. Lift fixture onto wall brackets and secure with fender washers and 1/4-20 flange nuts. Bring electrical feed into wireway and make wiring connections.
 - B) Rows of Fixtures: starting with first fixture in row, attach one End Cap and loosely mount fixture to wall brackets per step A. Mount each succeeding fixture in row to their wall brackets. Join fixtures together at row joints with (3) 1/4-20 screws and nuts. Level fixtures and align edges of housing's at joints before tightening nuts. Attach another End Cap to last fixture in row. Bring electrical feed into fixture and make connections. Wiring may be brought thru 7/8" holes in end headers at row joints.
5. Replace all Socket Plates and Ballast Covers.
6. Install lamps (supplied by contractor).
 - For Twin Tube lamps (BX): insert lamp pins into socket then rotate inward to seat in lamp support clip.
 - T5 and T5HO lamps are inserted into sockets then rotated 90 degrees to engage.
7. Fasten LCD to top of Ballast Cover with (2) sheet metal screws.

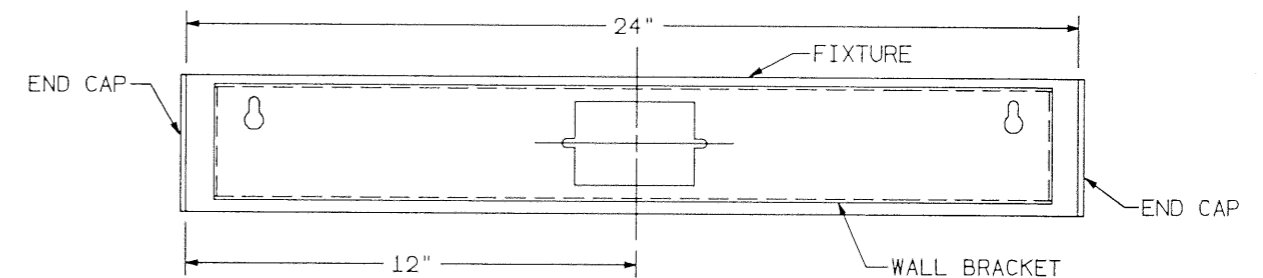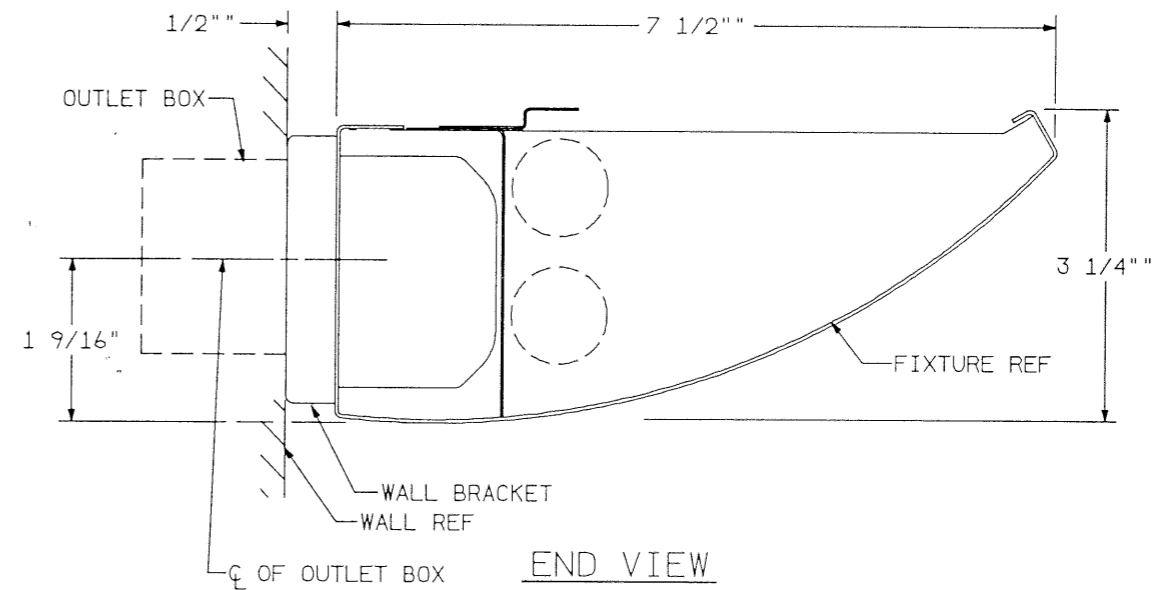

BACK VIEW 2' FIXTURE ONLY

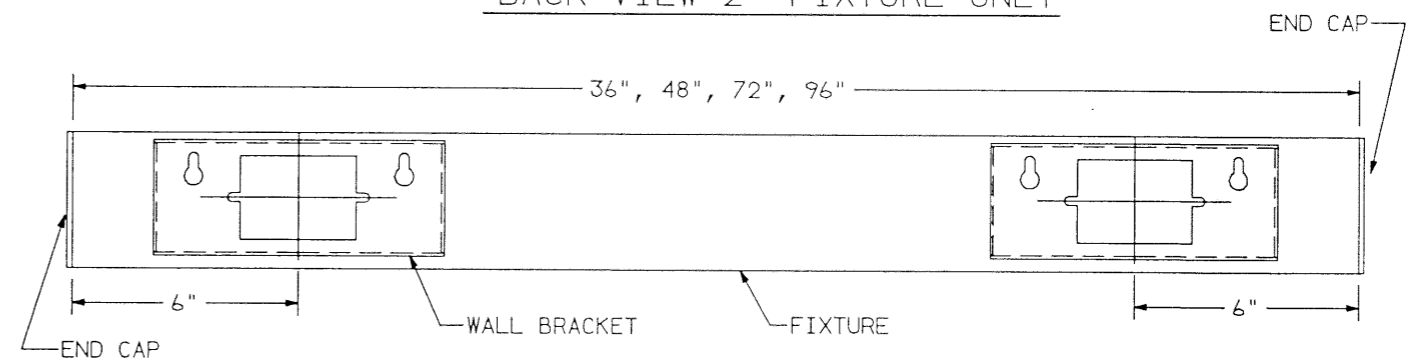

BACK VIEW SHOWING BRACKET LOCATIONS FOR 3', 4', 6' & 8' LENGTH FIXTURES

LITECONTROL

100 HAWKS AVENUE - PO BOX 100 - HANSON MA 02341, (781-294-0100)

INSTALLATION INSTRUCTIONS

PART NO. 510389-0000


FIXTURE TYPE _____

FIXTURE W-AI-9600

PG. 2 OF 2

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

NOTE: FIXTURE INTERNAL COMPONENTS ARE NOT SHOWN FOR CLARITY PURPOSES.

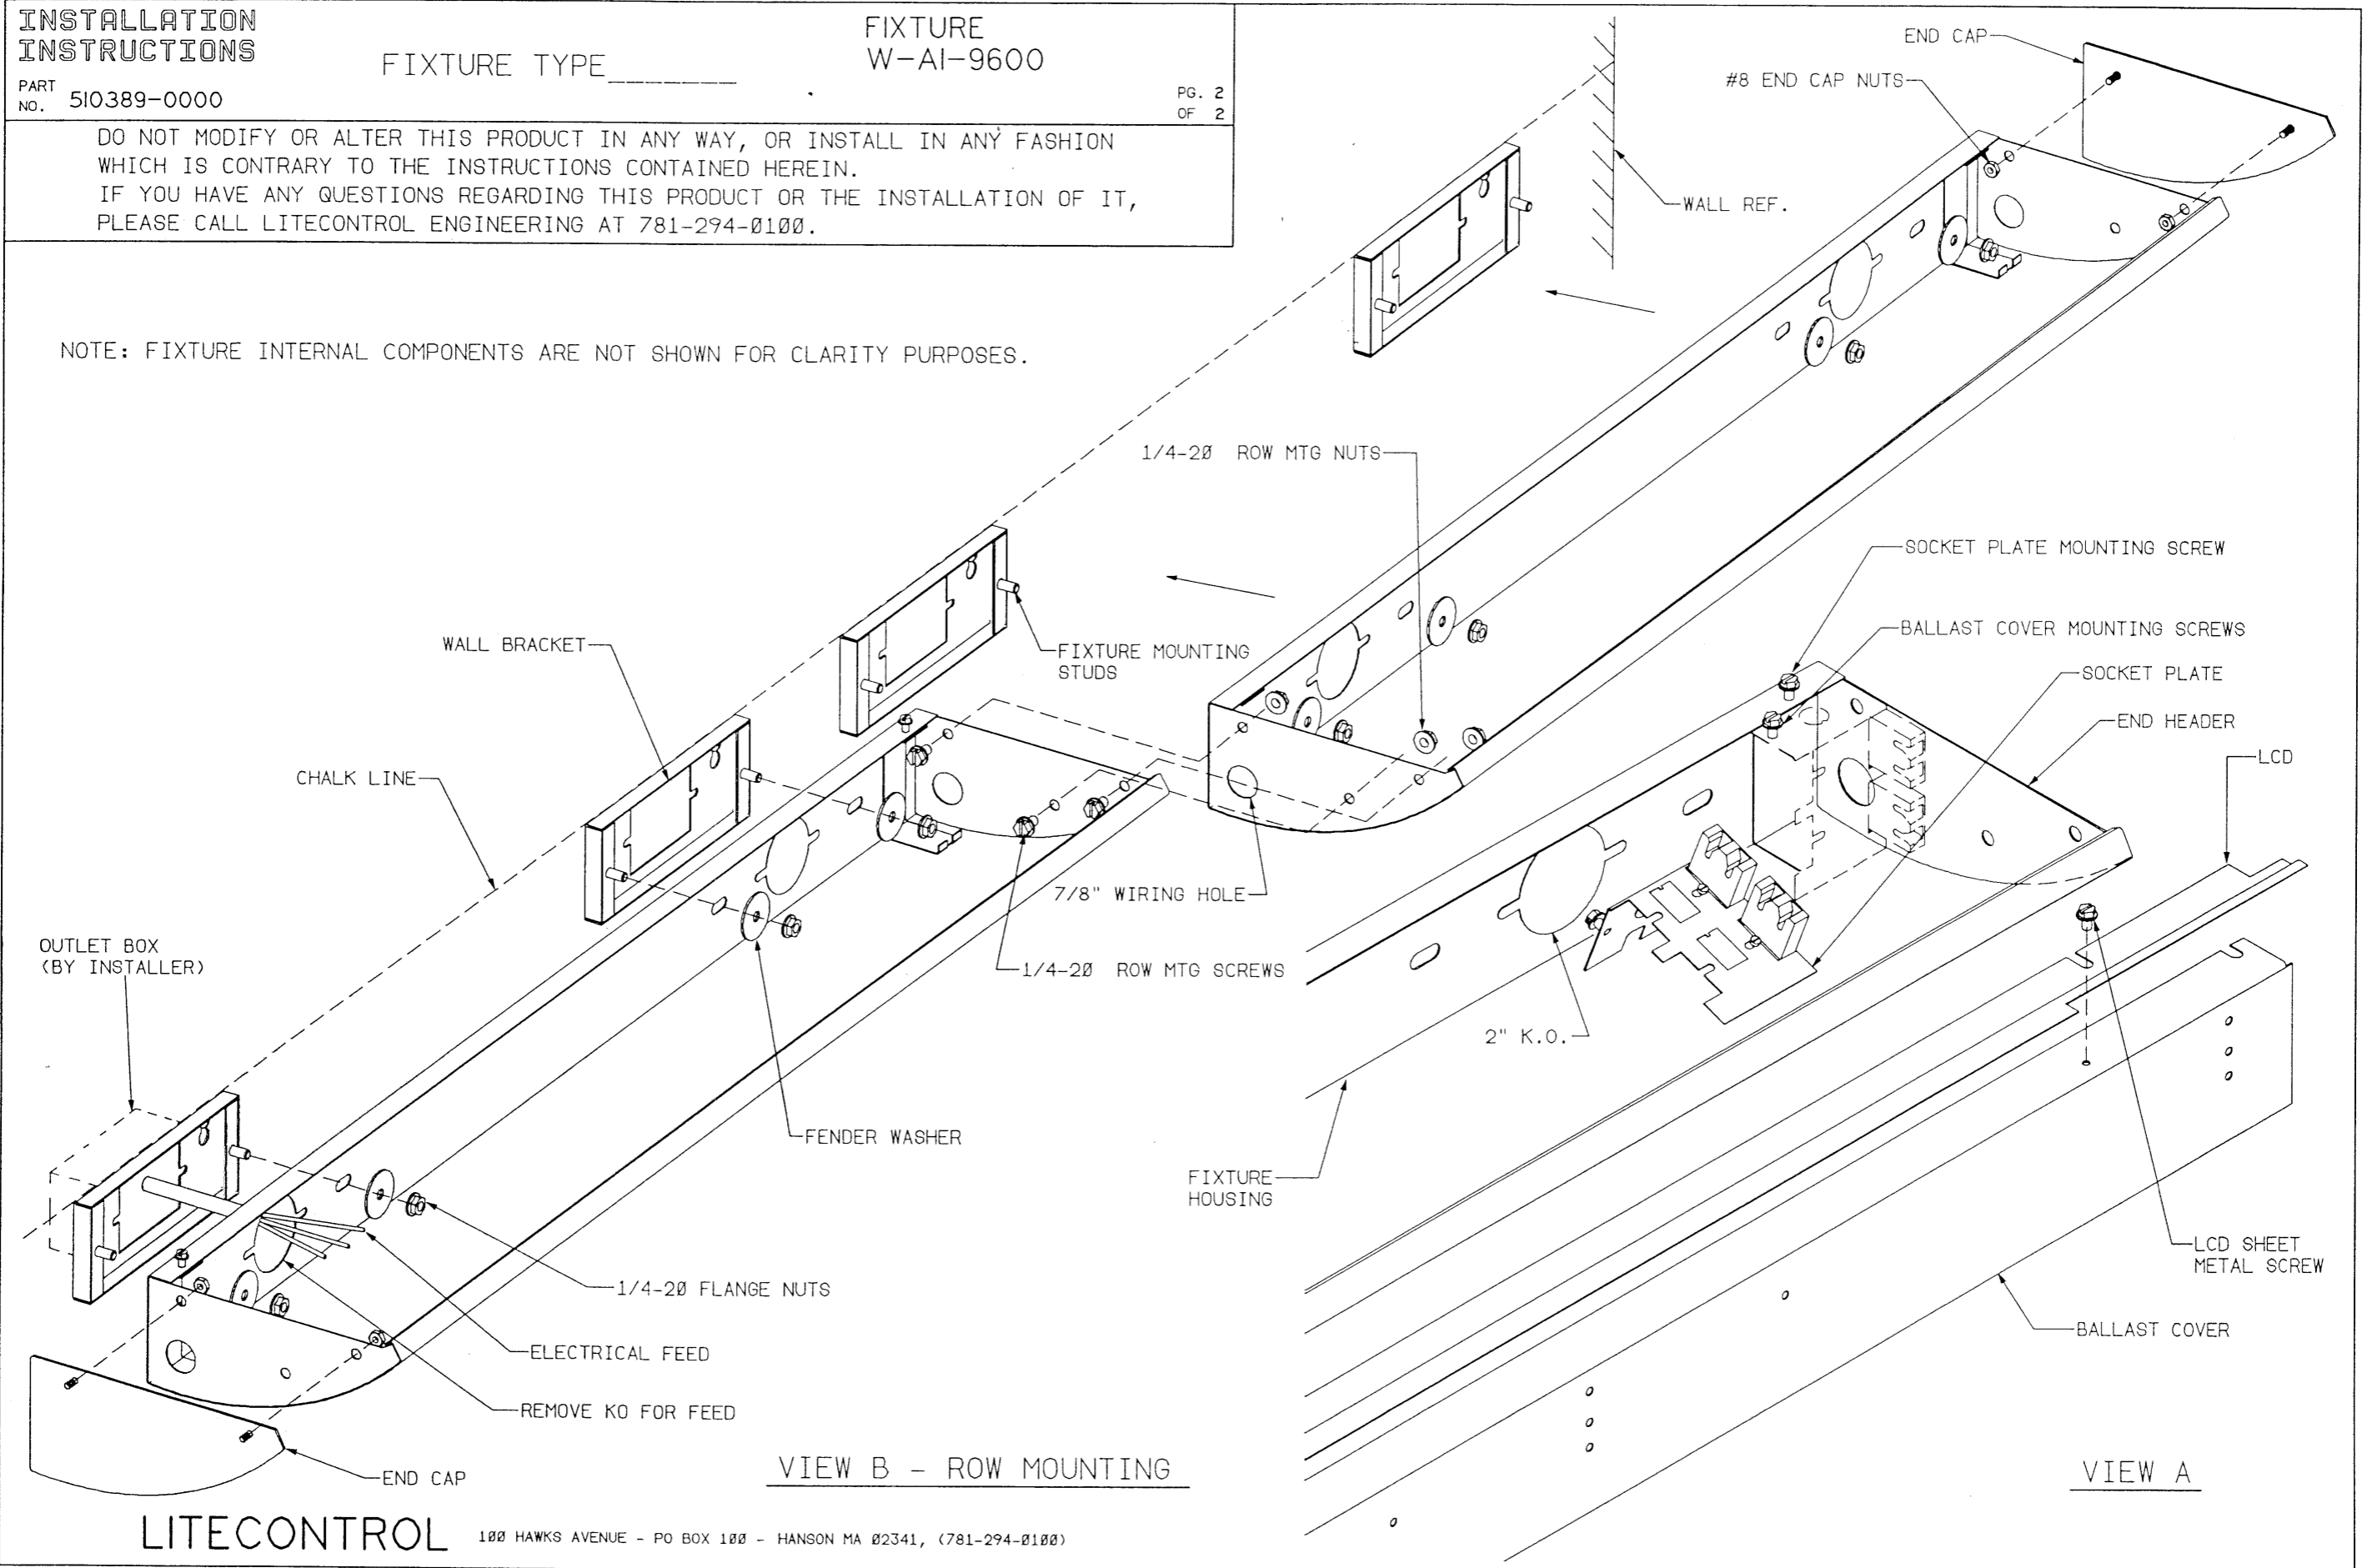

VIEW B - ROW MOUNTING

VIEW A

LITECONTROL

100 HAWKS AVENUE - PO BOX 100 - HANSON MA 02341, (781-294-0100)