

**INSTALLATION
INSTRUCTIONS**

P/C 510155-2000


Fixture Type

Wall/Slot 85N

PR-Reflector Option

Do not modify or alter this product in any way, or install in any fashion which is contrary to the instructions contained herein.
If you have any questions regarding this product or the installation of it, please call Litecontrol Engineering at 781-294-0100.

Bottom View Ballast Cover Removed

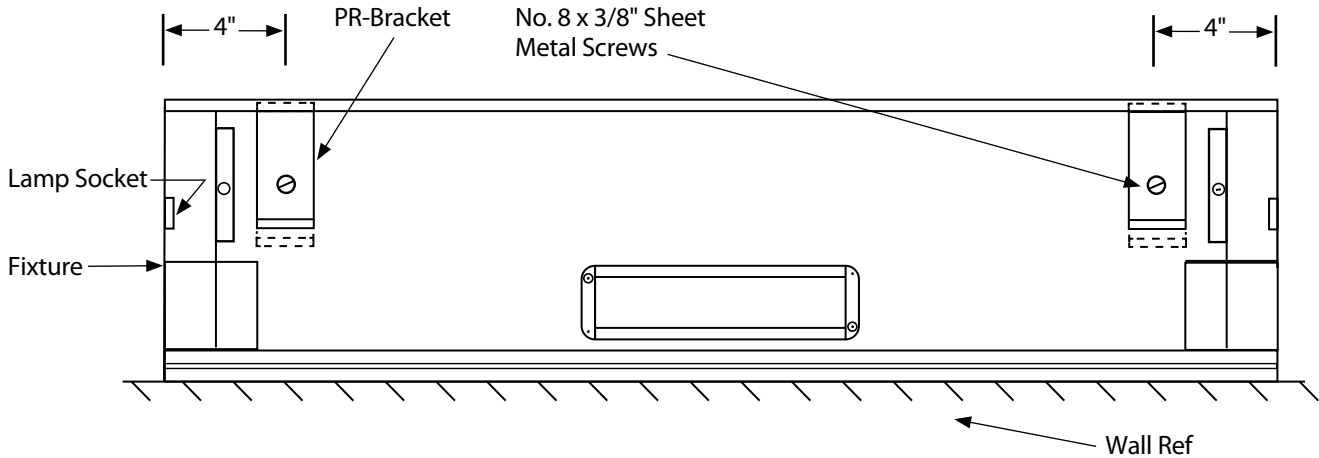

NOTE: For ease of installation, ballast cover(s) should not be installed at this time.

Instructions:

1. Loosely install PR-Brackets in fixture with #8 sheet metal screws. Refer to "bottom view" shown above.

NOTE: (2) brackets are required on 24", 36", 48", and 60" long fixtures; (4) brackets for 72" and 96" long fixtures.

2. Slide brackets towards wall as far as possible.
3. By holding thumb tabs, rotate PR-reflector into fixture until seated in brackets and on housing flange. Slide brackets towards shield side and tighten sheet metal screws.
4. Clean reflector surface with non-detergent soapy water solution and rinse with clean water.

Cross Section

