



DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN.
IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

NOTES:

- 1. THIS SUPPLEMENTAL INSTRUCTION SHEET IS USED WITH FIXTURE INSTRUCTIONS P/C 510497.**
- 2. SHUT OFF POWER BEFORE MAKING WIRING CONNECTIONS AND WHEN UNPLUGGING CONNECTORS.**
- 3. WIRING DIAGRAMS BELOW ARE FOR MAKING CONNECTIONS FROM THE BRANCH CIRCUIT TO THE FEMALE PLUG-IN CONNECTOR SUPPLIED BY LITECONTROL. MALE CONNECTOR IS SUPPLIED WIRED TO THE BEDLITE FIXTURE.**
- 4. DIMMING FIXTURES WIRED FOR 2 CIRCUITS WILL BE SUPPLIED WITH A FEMALE CONNECTOR FOR EACH CIRCUIT.**

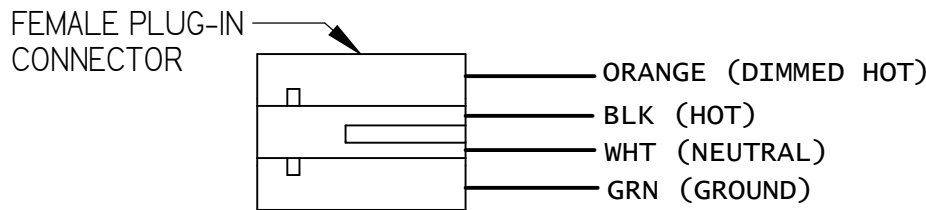

WIRING DIAGRAM-LUTRON ECO-10 DIMMING

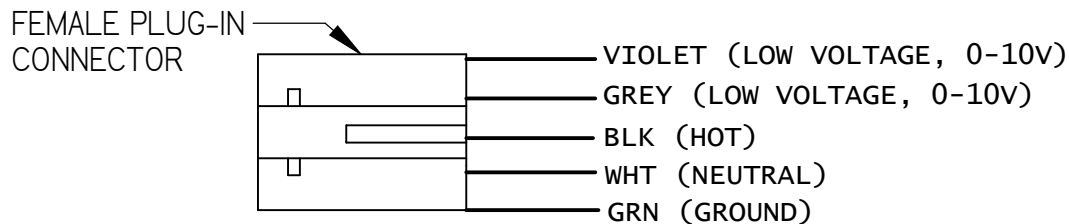

WIRING DIAGRAM-ADVANCE MARK 7 DIMMING