

INSTALLATION  
INSTRUCTIONS

FIXTURE TYPE \_\_\_\_\_


P-ID-35J R 00  
FIXTURE ASSEMBLY

P/C 510424-2000

DATE: 03/12/02

PG. 1 OF 1


DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN.  
IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

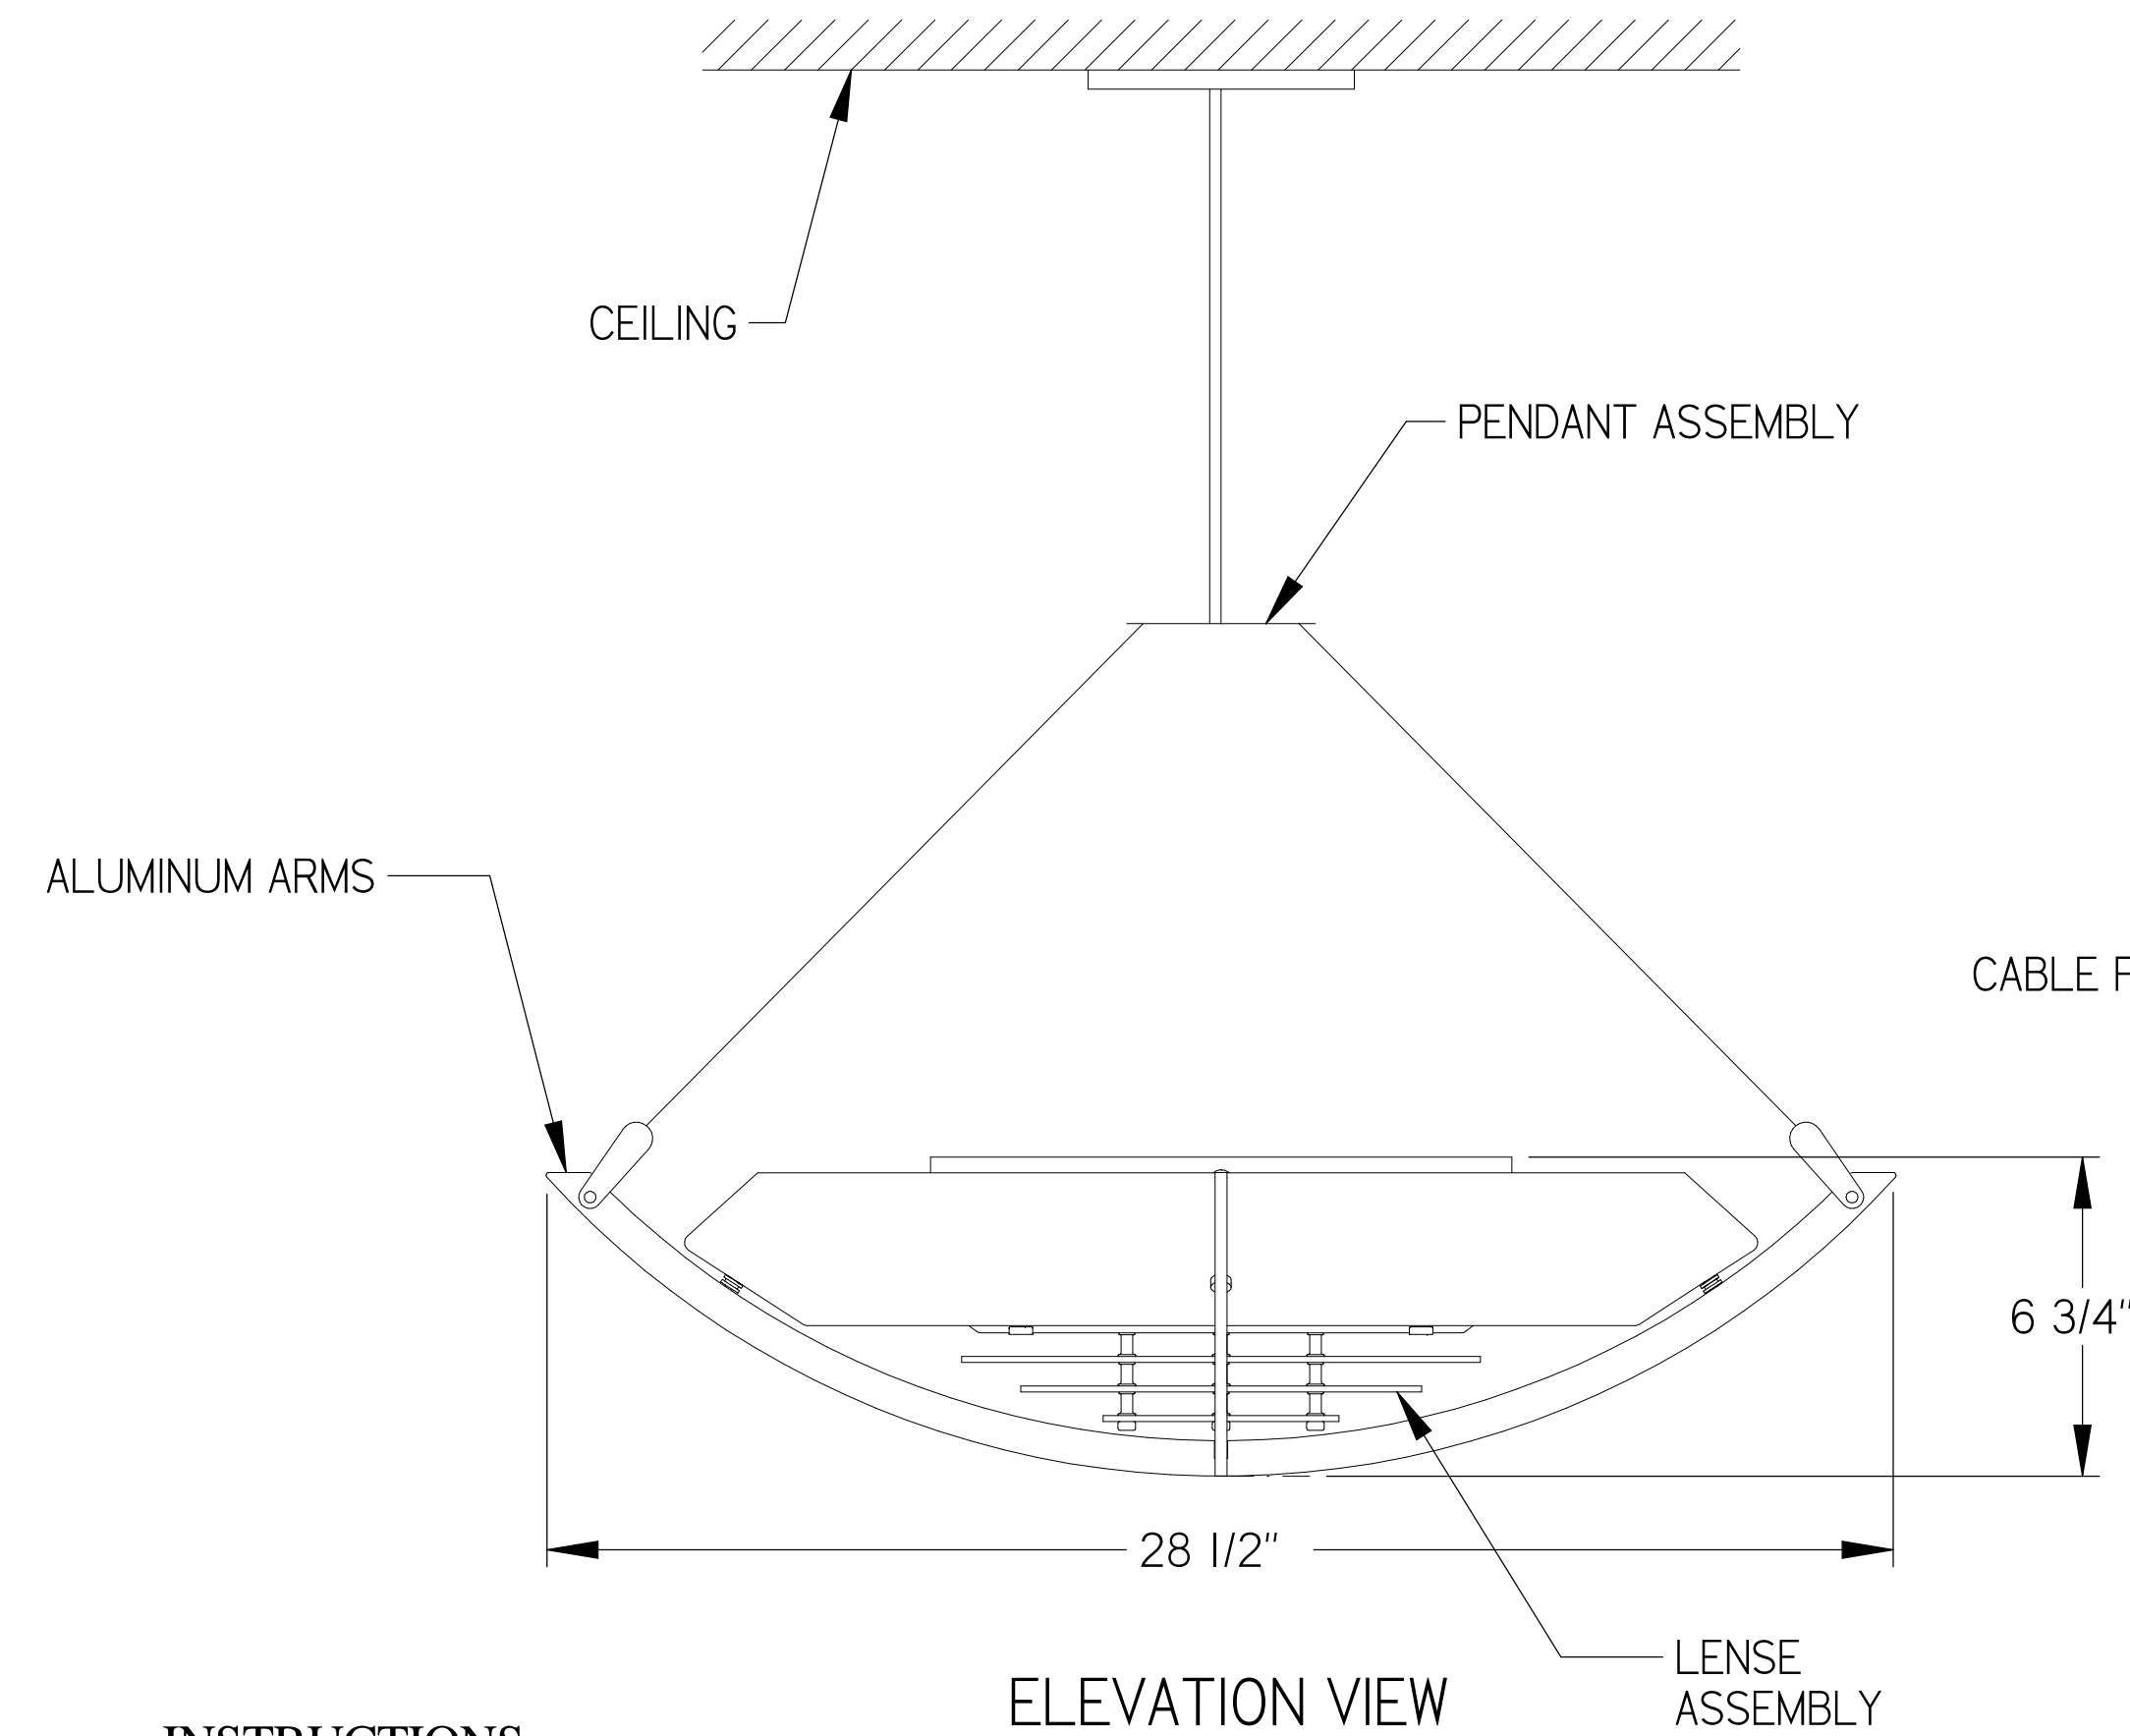

ELEVATION VIEW

INSTRUCTIONS:

1. INSTALL PENDANT ASSEMBLY (SHIPPED SEPARATELY) PER INSTRUCTION SHEET No. B510435.
2. REMOVE WIRWAY COVER BY REMOVING (2) SHEET METAL SCREWS.
3. REMOVE (4) THUMB SCREWS AND SLIDE OUT LENSE ASSEMBLY BETWEEN ALUMINUM ARMS AS SHOWN IN VIEW A. INSERT 21 WATT 2D LAMP BY OTHERS INTO 2D SOCKET AS SHOWN IN (SEE VIEW A) REPLACE LENSE ASSEMBLY.
4. LIFT FIXTURE UP AND ATTACH THE (4) CABLE FORK ENDS TO THE ALUMINUM ARMS WITH CLEVIS PINS AND RING CLIPS.
5. POSITION FEED CORD AGAINST ADJACENT CABLE AND TIE CORD TO CABLE WITH NYLON TIE FASTENERS (SHIPPED WITH PENDANT ASSY)
6. ATTACH A STRAIN RELIEF BUSHING (SHIPPED WITH PENDANT ASSY) TO LOWER END OF FEED CORD AND SNAP BUSHING INTO HOLE AS SHOWN.
7. MAKE WIRING CONNECTIONS AND THEN TUCK WIRES BACK INTO FIXTURE WIREWAY COMPARTMENT.
8. RE-INSTALL WIREWAY COVER REMOVED IN PREVIOUS STEP 2.
9. INSTALL LAMPS (BY OTHERS) BY INSERTING LAMP BASE INTO SOCKET.
10. CLEAN LAMP EXTERIOR WITH GENERAL WINDOW CLEANER.

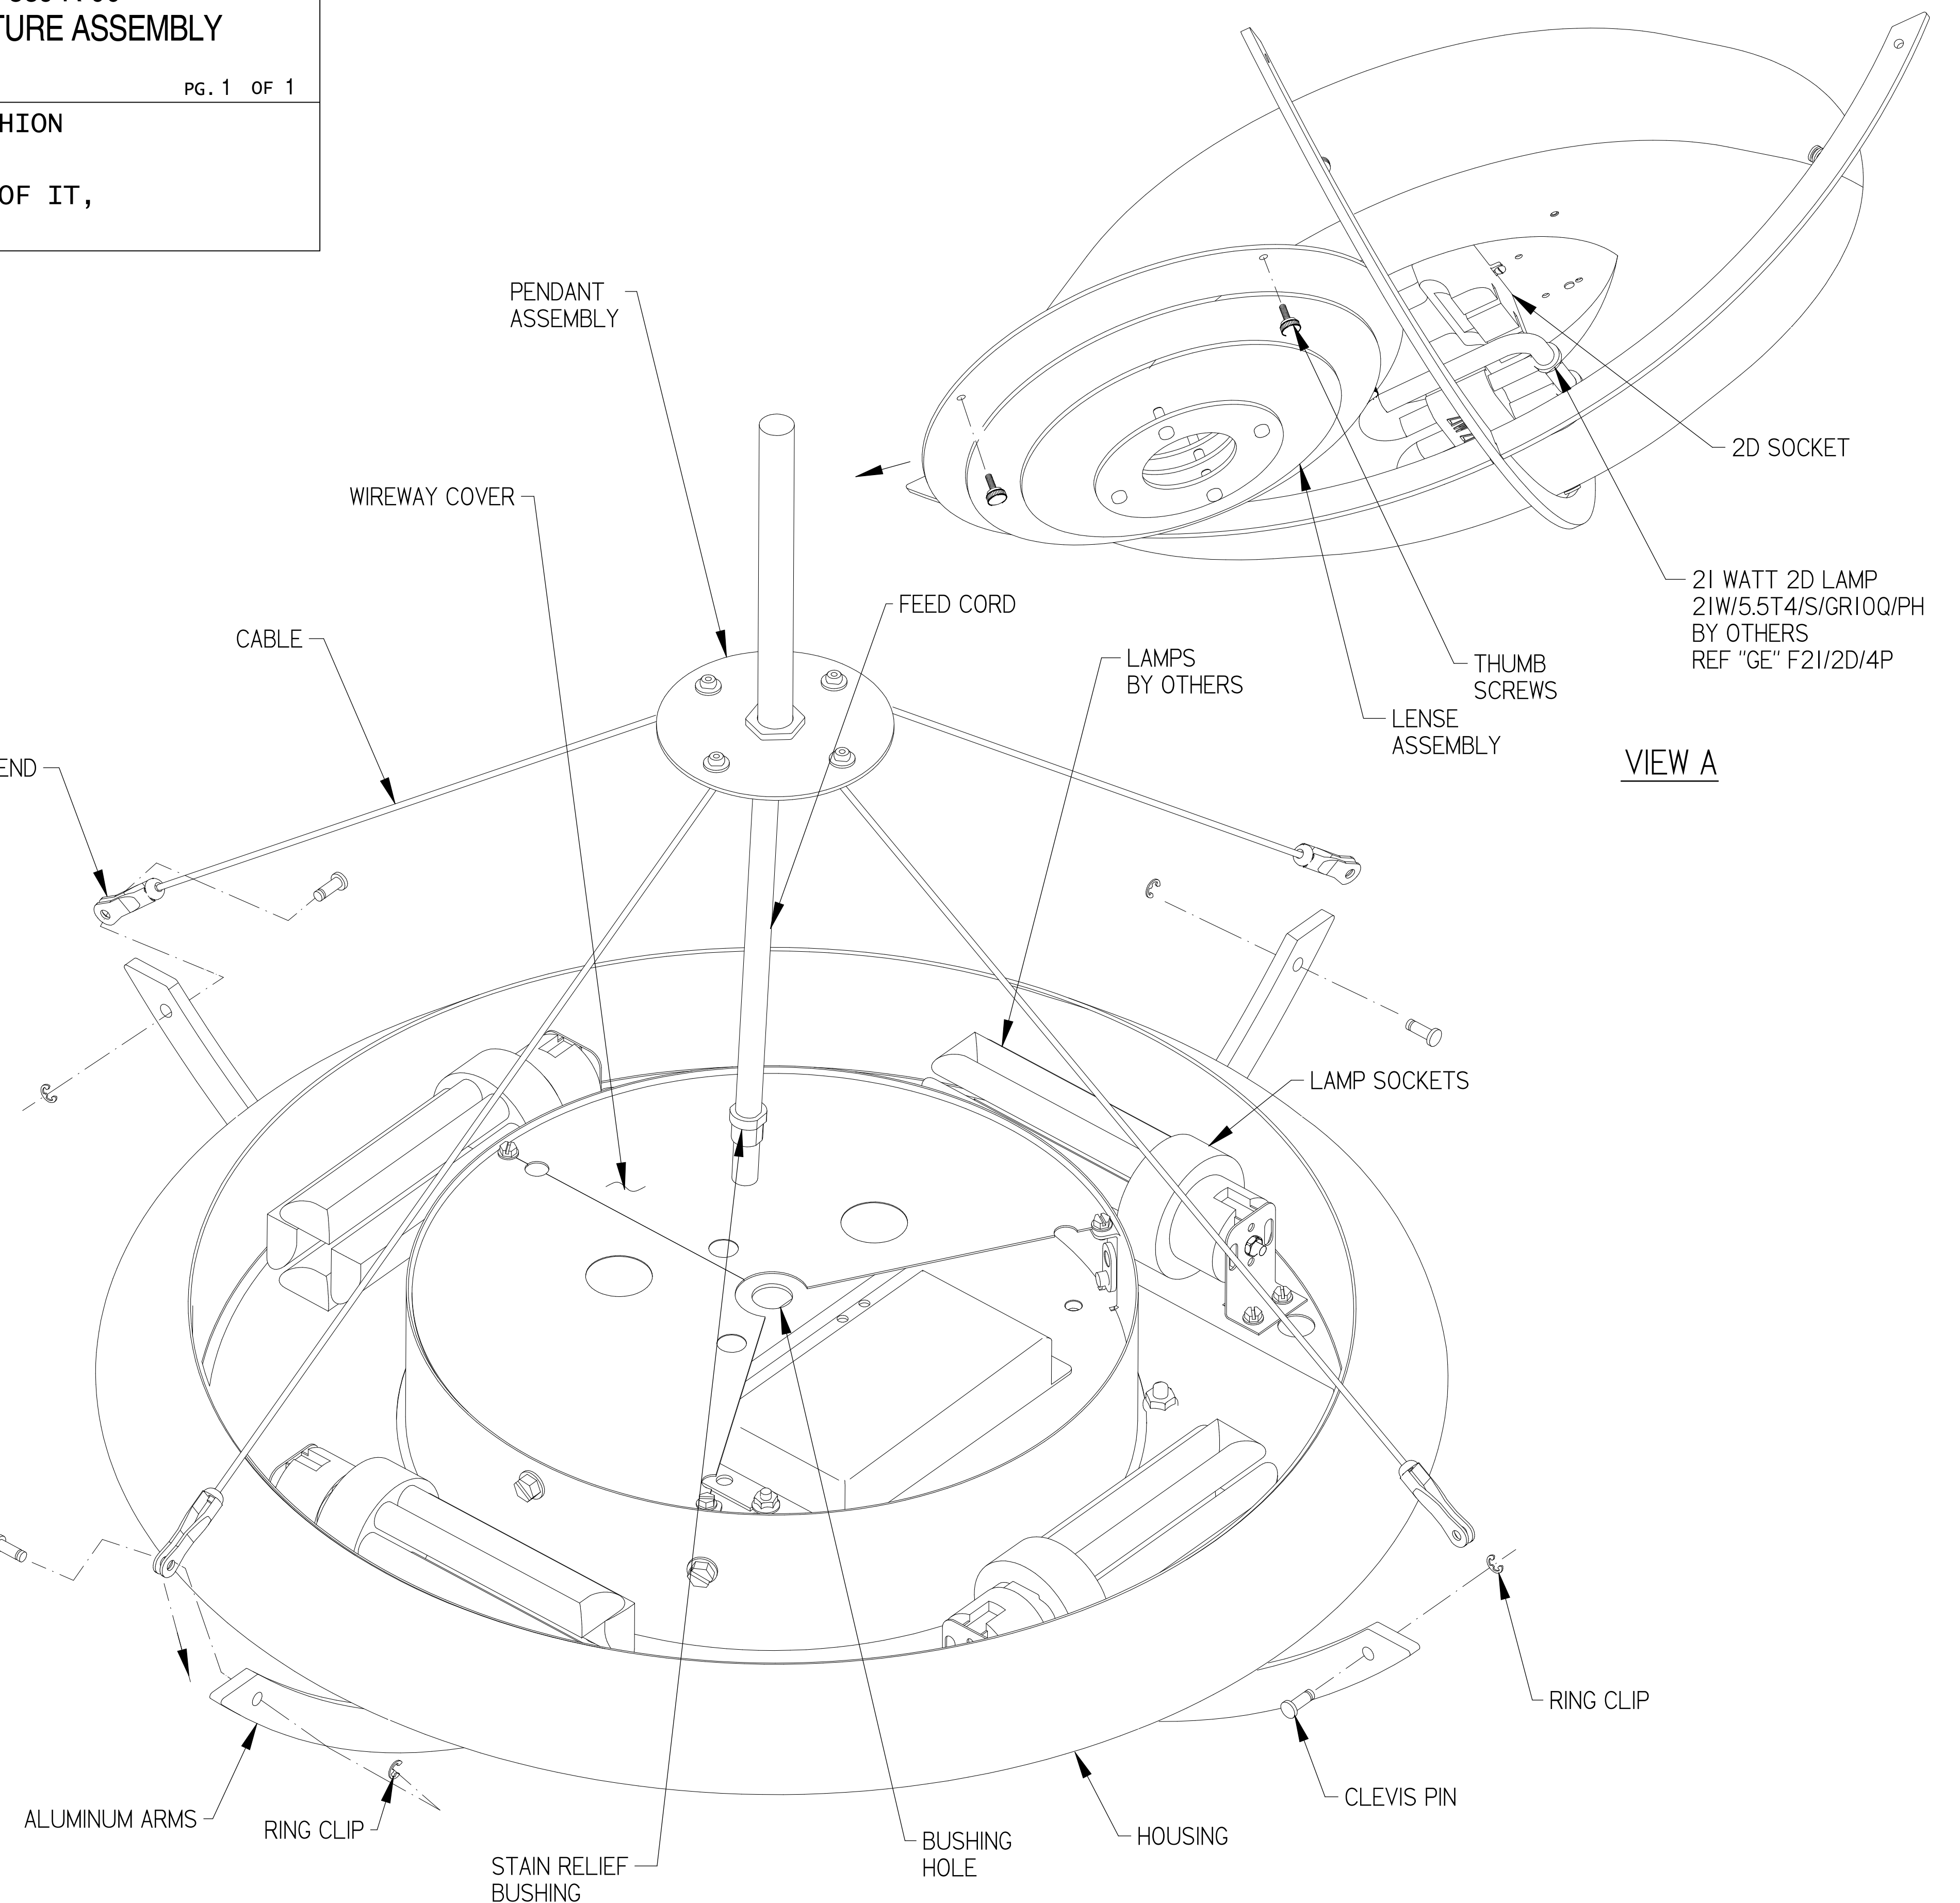

VIEW A