

INSTALLATION INSTRUCTIONS
P/C 510152-5000

Fixture Type

Wall/Slot 85N

Support Rails

Do not modify or alter this product in any way, or install in any fashion which is contrary to the instructions contained herein. If you have any questions regarding this product or the installation of it, please call Litecontrol Engineering at 781 294 0100.



NOTES: Prior to Starting

- Wall surface should be finished a minimum of 11" above ceiling.
- Support rails are shipped in 96" lengths: saw cut to suit field conditions. Spline keys are shipped installed in rail.
- For "Special Depth Shield" (SDS) option, it will be necessary to measure the shield height to figure dimension "W" (shields are shipped separately).

Instructions:

1. Chalk a level line at height above ceiling marked "X" along full length of wall for positioning the bottom edge of the support rail. See table for DIM "W".

Support Rail Table	
Type	Dim "W"
85N00	7 1/8"
85N00 with SDS Option	Shield Height minus 2 3/8"

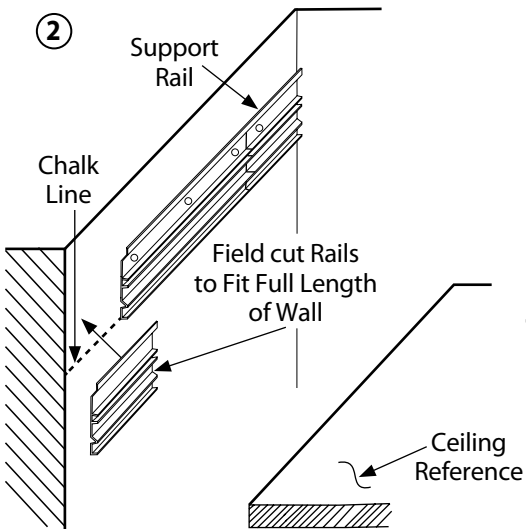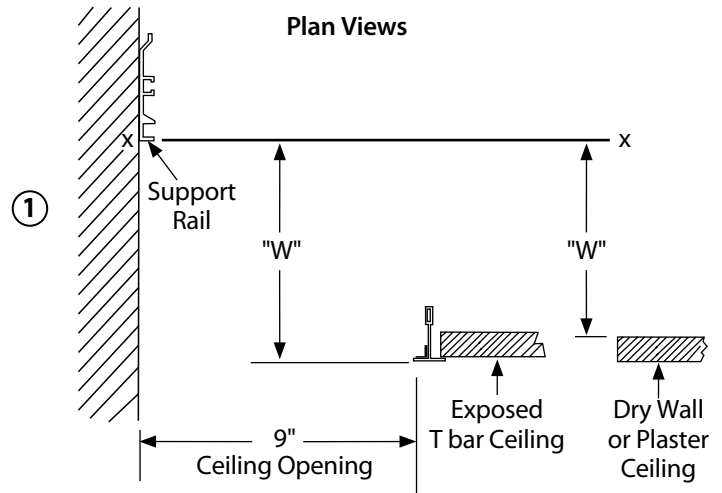

2. Place bottom edge of support rail on chalk line and using the staggered holes as a template, drill into wall for 1/4" diameter mounting bolts (by others). Use a minimum of (6) bolts to fasten each 96" rail.
3. Mount support rails to wall, inserting spline keys between rail ends as each length is added. Shim behind support rails when necessary to form a continuous straight rail.
4. Butt rail to rail at corners.

